




Brock's Performance Products • 4064 East Patterson Road • Dayton, OH 45430 • Phone: 937-912-0054 • Fax: 937-912-0062

### Sprocket Installation on BST Wheel

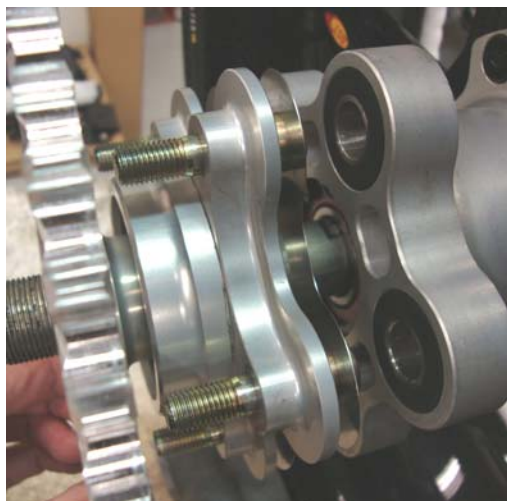

Place sprocket onto the sprocket carrier over the center hub and bolts.



Install the (5) sprocket mounting locknuts. It will be necessary to hold the bolts with an 8mm allen wrench from the rear.



Torque the (5) sprocket locknuts to 29.5 foot pounds (40 newton meters) while holding the bolts with an 8mm allen wrench from behind as shown.

**DO NOT ATTEMPT TO TORQUE SPROCKET BOLTS WITHOUT HOLDING FROM REAR.**

*Brock's Performance will NOT warrant any BST wheel that is damaged by improper installation of drive sprocket.*

For more information go to [www.BrocksPerformance.com](http://www.BrocksPerformance.com), **click:** Installation Instructions  
email: [Advice@BrocksPerformance.com](mailto:Advice@BrocksPerformance.com) or call the office at 937-912-0054

Brock's Performance Products policies and warranty information: [www.BrocksPerformance.com](http://www.BrocksPerformance.com), **click:** Policies

All products manufactured by Brock's Performance are guaranteed against defects in material and workmanship. Defective products will be replaced or credit given at our option. Brock's Performance makes no other warranty of any kind, expressed or implied. Brock's Performance will not be held liable for any loss or damages incidental, direct or consequential from the use of, or inability to use, Brock's Performance products. Use other than specified, any alterations to product, or product mounting area voids warranty. Brock's Performance products are guaranteed in accordance with the manufacturer's own terms of warranty.